
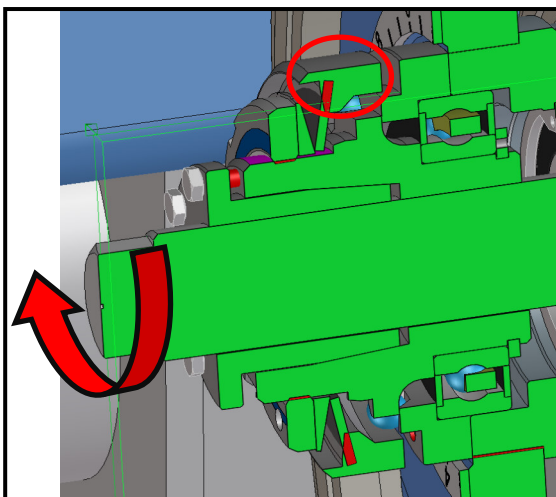
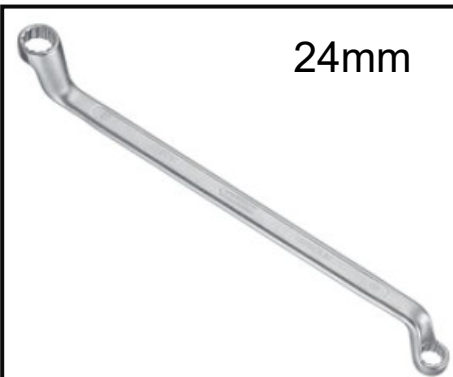
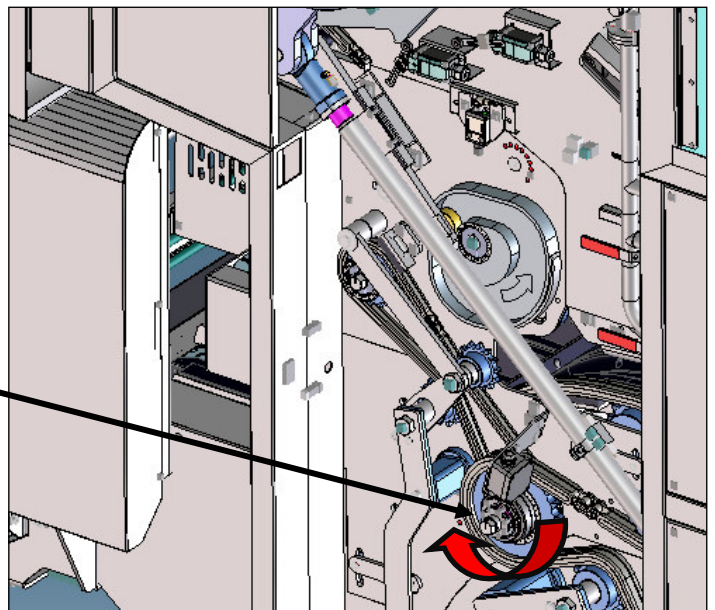


Reset Safety clutch infeed assembly

If there is an overload in the infeed assembly, the safety clutch triggers and the machine stops. See the light at control unit.

When you have solved the problem. Turn the infeed by hand in any direction until the safety clutch jumps back into working position

Then press "reset overload clutch"

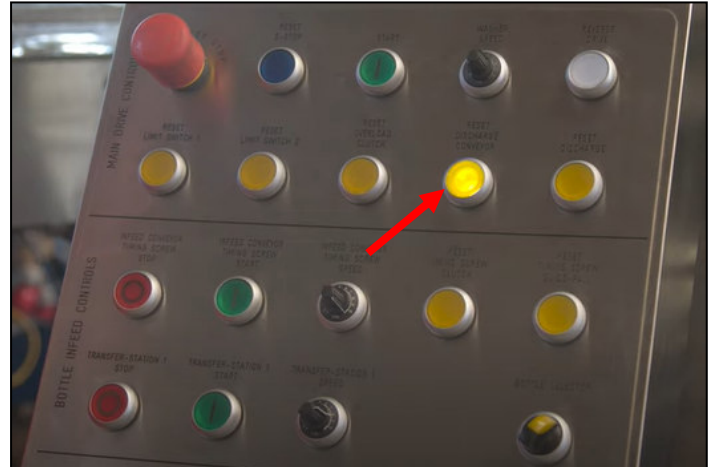

Turn until the ring jumps back

