



Machine Lubrication Points


d - 11

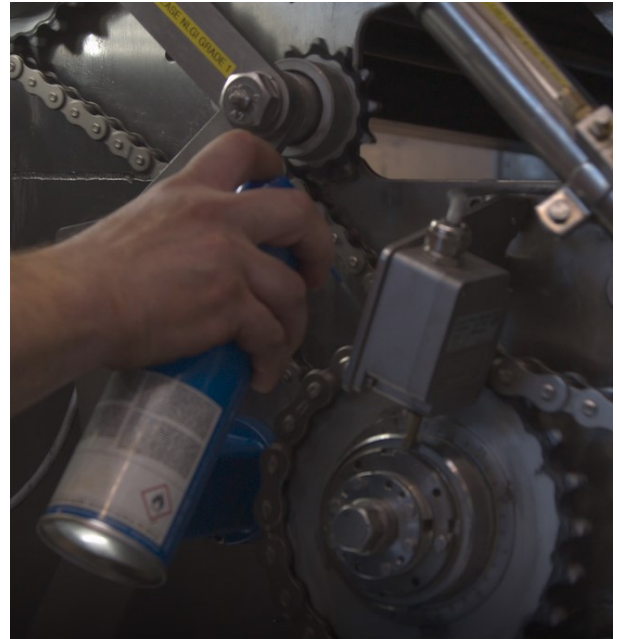

All chains in the washer should be greased with chain lube daily after shift end.

For best results and better spray lube distribution, run the washer on slow speed and spray all drive chains.

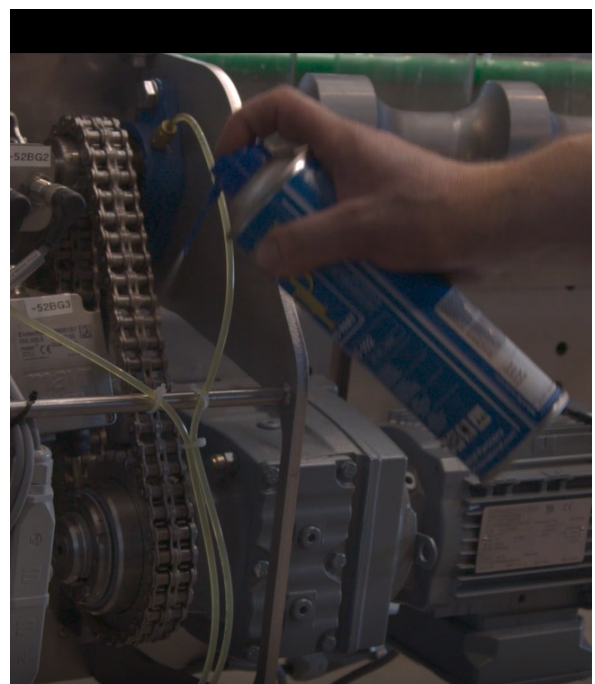


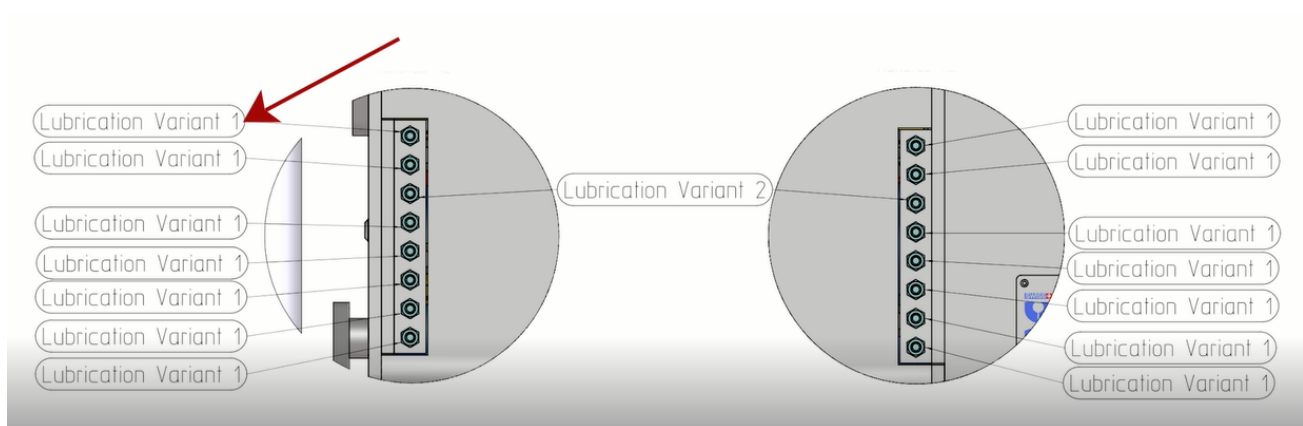



Variant 1 lubrication points need to be greased every 50 hours or once a week.

Variant 2 lubrication points need to be greased daily.

Recommended grease is Castrol Tribol GR 100-1 PD

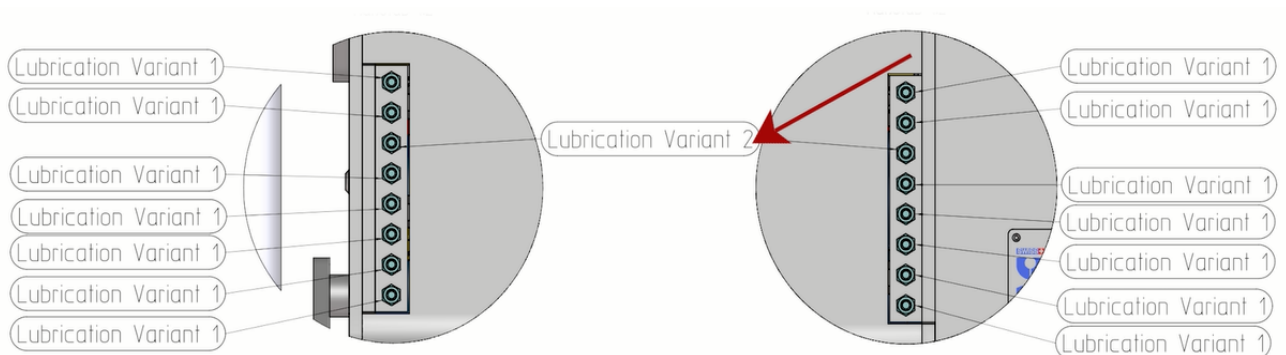

Machine Lubrication Points

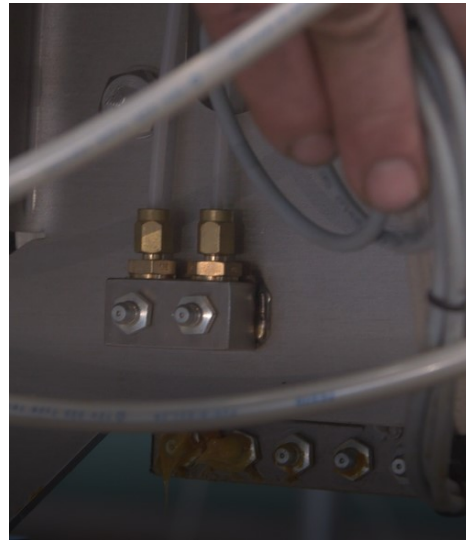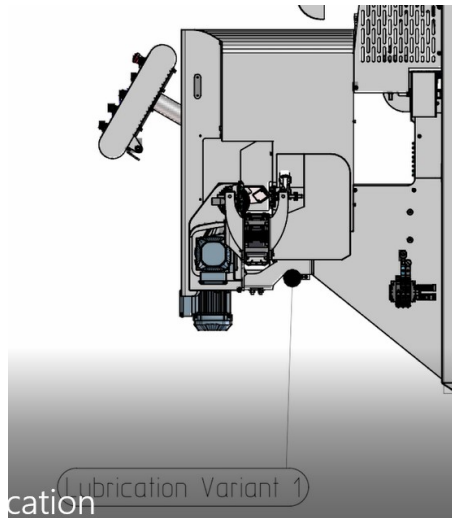


Grease fittings on the lower right side of the washer

Recommended grease:

Castrol Tribol GR 100-1 PD

Grease fittings on the lower left side of the washer

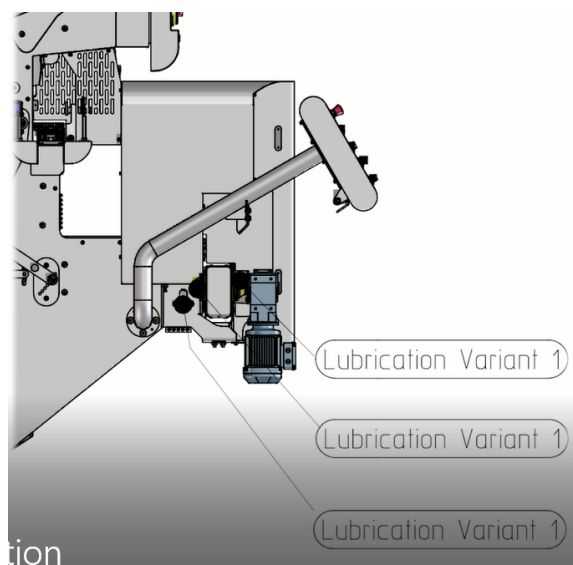




Machine Lubrication Points



Grease fittings in the main drive cabinet of the washer.

Recommended grease:

Castrol Tribol GR 100-1 PD

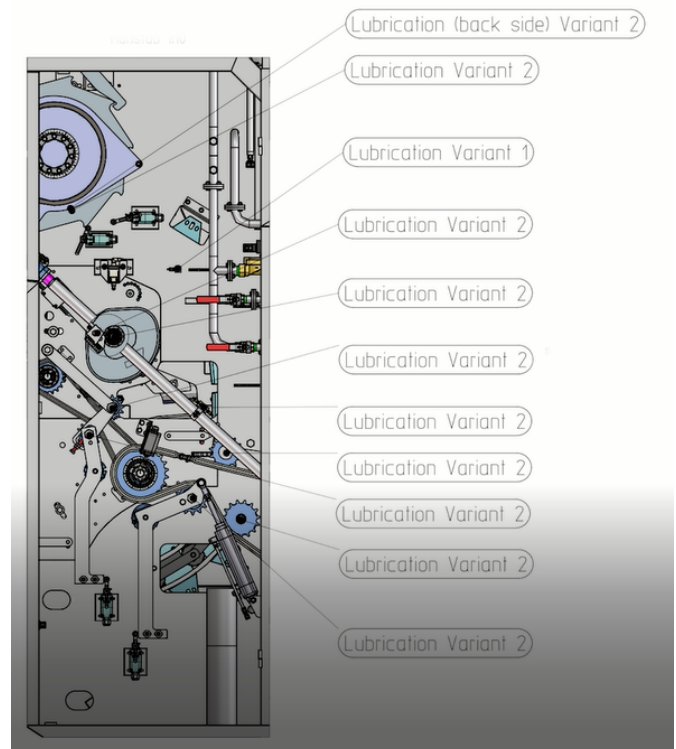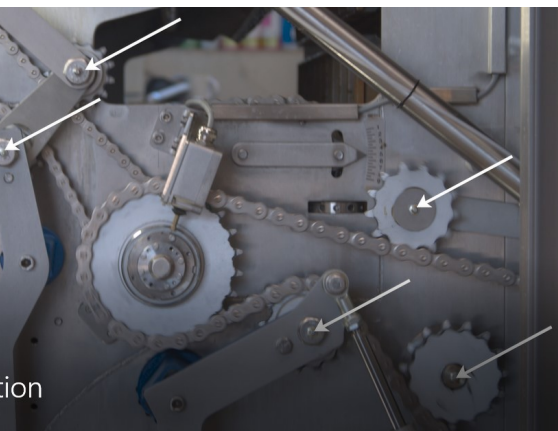
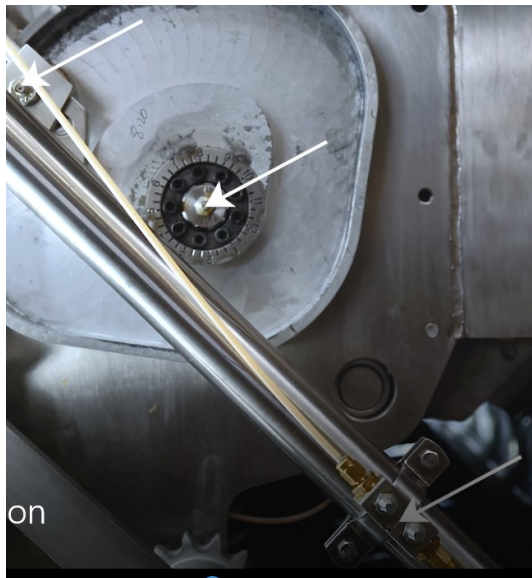


Machine Lubrication Points

Grease fittings on the right side middle section.

Recommended grease:


Castrol Tribol GR 100-1 PD

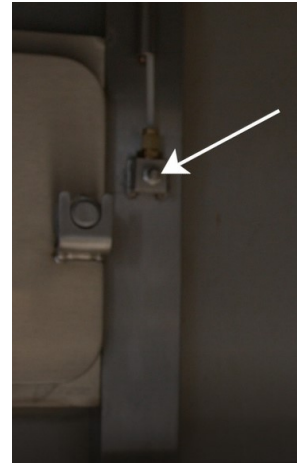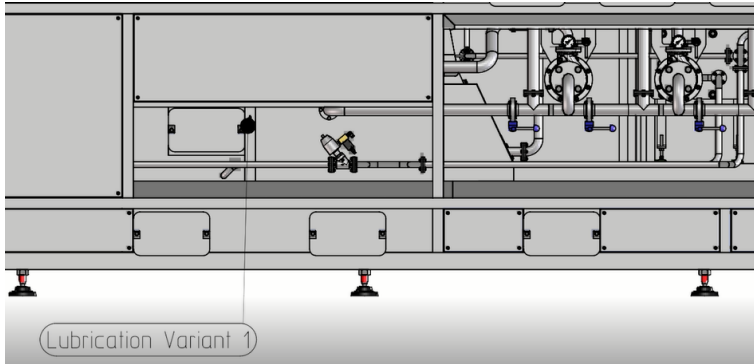

Grease fittings on the right side rear section.

Recommended grease:

Castrol Tribol GR 100-1 PD




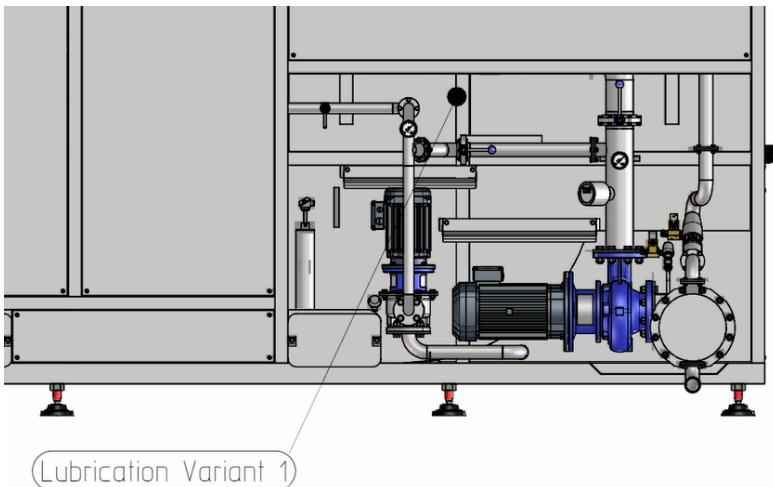


Machine Lubrication Points

Grease fittings on the left side front section.

Recommended grease:



Castrol Tribol GR 100-1 PD

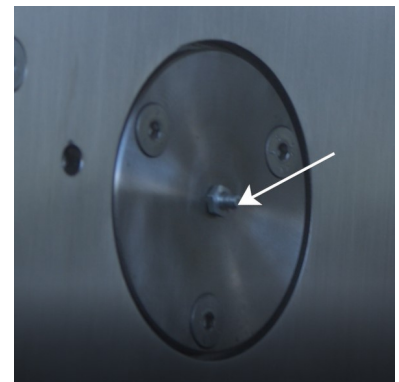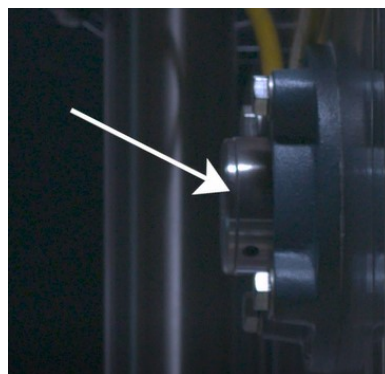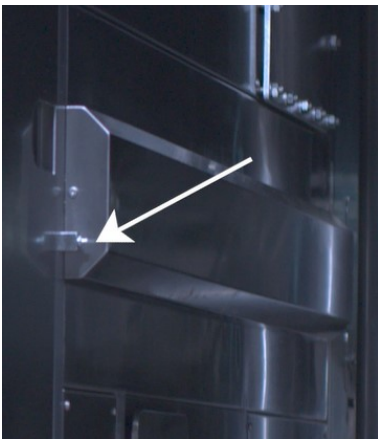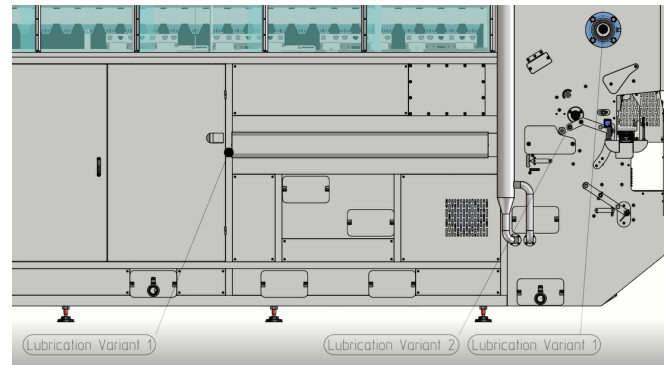

Grease fittings on the left side rear section.

Recommended grease:

Castrol Tribol GR 100-1 PD

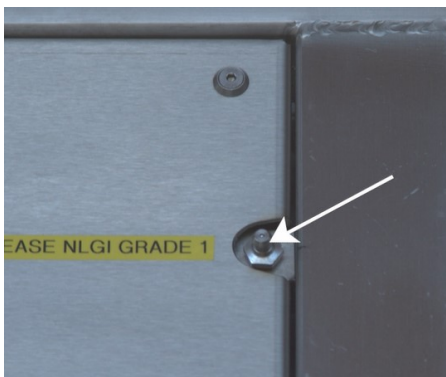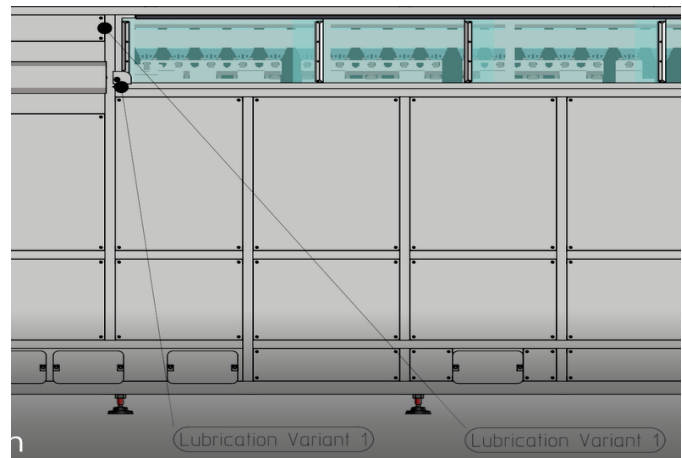

Gear Box Oil Change

The first gear oil change is carried out after 1 year or 1,000 operating hours and thereafter every 2 years.

Recommended oil:

Shell Omala S2 G 150

To change the oil, stop the machine and let the oil collect in the gear box as shown in the level indicator glass.



Use the gear oil fill plug to replace the oil and watch the level indicator glass until the recommended level is reached.

Open the 2 drain plugs to remove the oil.

